



Operation

Using Your Control Panel: drive

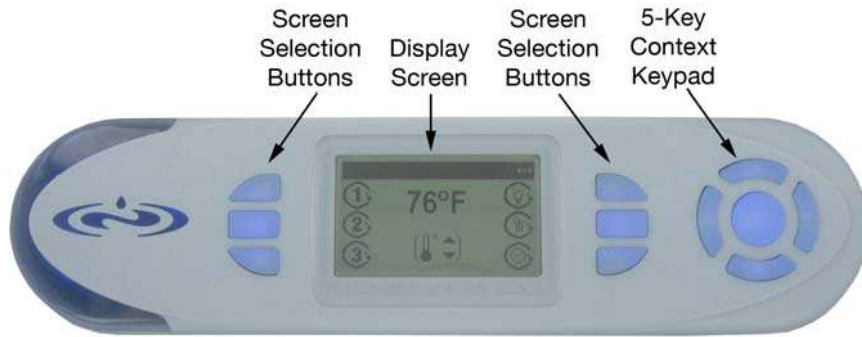


Push the screen selection button next to any item to turn on that item. When active, the ring around that item will spin. Push the button again to turn off the item. In a menu, push the button next to an item to bring up that item.


Navigation

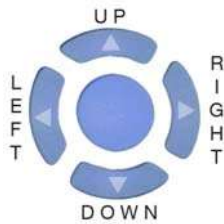


The 5-Key Context Keypad

The 5-Key Context Keypad buttons access and change spa settings quickly and easily. On each menu, the current navigation options are indicated in the upper right corner of the screen. The left and right arrows allow navigation through the menu structure.

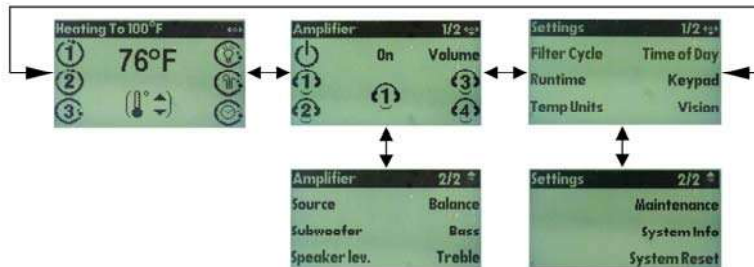

There are three main menus on the  drive Control Panel: the Temperature menu, the Amplifier menu, and the Settings menu. The Temperature menu sets the spa temperature, turn jet pumps on and off, and operate the spa's light and waterfall. The Amplifier menu controls the settings for the spa's optional Sonic Immersion System; if there is no Sonic Immersion System installed, this menu will not display. The Settings menu adjusts other various aspects of the spa, including the time of day and display screen brightness.

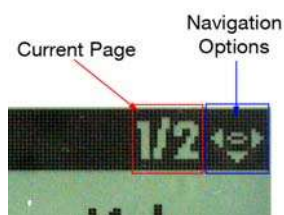

The amplifier and settings menus both contain two pages of options; the current one is indicated in the top right of the display. On the 5-Key Context Keypad, the up and down buttons scroll between pages 1 and 2 in that particular menu. The center button goes back to page 1 of the current menu; if it is at page 1, it goes back to the Temperature menu. To adjust a setting (i.e. bass), the center key goes back to the menu to access that setting.

Spa Menu



The Hotkey

The Hotkey allows the spa to display different sets of information on the screen while still giving access to the main controls. Pushing the Hotkey changes the information displayed in the center of the Spa Menu in the following sequence:



Temperature Screen

The Temperature screen displays the current spa temperature and sets the desired spa temperature .



Clock Screen

The Clock screen displays the current time of day.



Runtime Screen

The Runtime screen shows how much time remains in the current jet cycle for each pump.



Invert Screen

The Invert screen inverts the display to face the inside or outside of the spa with the up and down arrows on the 5-Key Context Keypad .



Volume Screen

The Volume screen shows and adjusts the current volume level for the amplifier, using the up and down arrows on the 5-Key Context Keypad.



NOTE: This option will only display if the optional Wireless Sonic Immersion System is installed.

Push the Hotkey again to return to the default Temperature screen and restart the sequence.




Adjusting Temperature

From the Temperature screen, push the up or down arrow on the 5-Key Context Keypad to enter the Setpoint screen. In this screen, use up and down to select the desired temperature. Press Accept to save the changes.



Summer Mode

During hot weather, normal filtering can cause the spa to exceed the set temperature, which stops the circulation pump so the spa can cool. If the spa is not filtering enough during hot weather, it is possible to put it into Summer Mode to allow the pump to keep running.

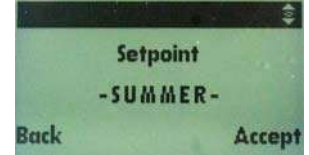

To enter Summer Mode, adjust the set point to the lowest possible temperature, 59°F (15°C), and continue to hold the down arrow on the 5-Key Context Keypad. The temperature value will be replaced by "Summer."

Light Operation




Press the light button once to enter Brilliant Mode. All lights are turned ON in the spa. To switch to Candle Mode press the light button once, then push it again just after "LIGHT OFF" begins to scroll off of the display. The lights in the air valves, tile line, and fountain are on; the spa light is off. To switch to Fountain Mode, press the light button once, and then push it again just after "LIGHT OFF" begins to scroll off of the display. The fountain light is on; all other spa lights are off. Push the light button once, then press it again just after "LIGHT OFF" begins to scroll off the screen to switch back into Brilliant Mode. To lock in your favorite light color, push and hold the light button until all lights in the spa blink off, then on. To unlock and return to the color wheel, hold down the light button until the lights blink off and on again.

Standby Mode

To enter Standby mode, hold down the center key on the 5-Key Context Keypad while on the home screen for 5 seconds. This mode disables all automatic and manual functions so the pumps do not accidentally start while you are cleaning the filters. The spa stays in standby mode for 30 minutes. To reactivate the spa, press exit.



Amplifier Menu

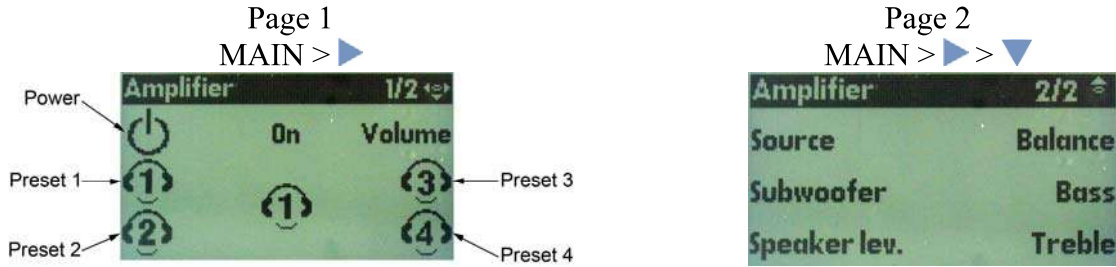

Presets

The icons 1, 2, 3 and 4 correspond to presets for the Sonic Immersion System Amplifier. Presets allow the spa to save or recall settings of the Sonic Immersion Systems Amplifier, such as subwoofer level, speaker level, bass, treble, and source input.




A short press of a preset button will load that preset.

A long press on a preset button will save the amplifier's current settings to that preset number.

Volume


Use the up and down arrows on the 5-Key Context Keypad to select the desired volume. Press Accept to save the changes.

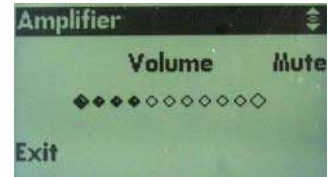

Press Mute to temporarily turn off the amplifier's speakers. Push Mute again to turn the speakers back on.

Source


Push the Source button on page 2 of the Amplifier menu to bring up the Source selection screen. On this screen, select which audio input to play through the spa's Sonic Immersion System. To play audio through the stereo mini jack located on the spa, select SPA. To play audio from a home stereo system via a Wireless Sonic Immersion System, select House. If Auto is selected, the spa will play audio from a home stereo unless there is something plugged into the stereo mini jack.

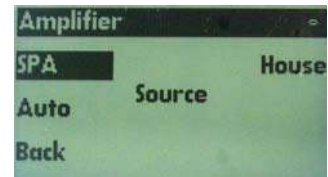

Select the audio source by pressing the button next to your selection. The selection will become highlighted. Press Back to exit the menu .

Adjusting Stereo Settings

On the Amplifier menu, press Subwoofer, Speaker Level, Balance, Bass or Treble to bring up that parameter's adjustment menu. In these menus, use the up and down arrows on the 5-Key Context Keypad to adjust that setting. Press Exit to leave the menu.

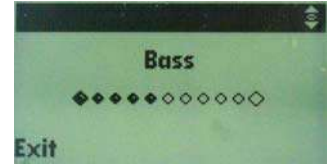


Settings Menu



Filter Cycle Menu

Pressing the filter cycle button brings up the filter cycle menu, which adjusts how long and how often the spa's filter cycle runs.

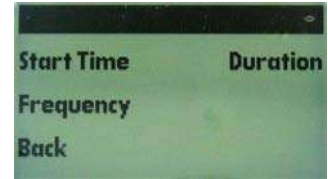

Start Time

To adjust the filter cycle's start time, use the left and right arrows on the 5-Key Context Keypad to select whether to modify hours or minutes. Use the up and down arrows on the 5-Key Context Keypad to select the start time. Press Accept to save the changes.




Frequency

Use the up and down arrows on the 5-Key Context Keypad to adjust the number of filter cycles per day. Press Accept to save the changes.




Duration

Use the up and down arrows on the 5-Key Context Keypad to adjust how many minutes each filter cycle will run last. Press Accept to save the changes.

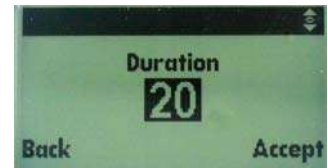

Runtime

Pressing the Runtime button brings up the Runtime Setting menu. This menu adjusts how long the jets and waterfall run.

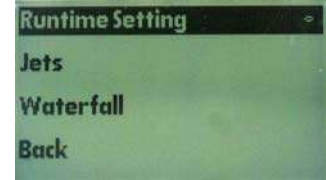

Adjusting Runtime

Push the Jets or Waterfall button to bring up that item's Runtime screen. On this screen, use the up and down arrows on the 5-Key Context Keypad to select how many minutes each cycle will last. Press Accept to save the changes.



Temperature Units

Push the Temp. Units button to bring up the Temperature Units screen. Use the up and down arrows on the 5-Key Context Keypad to select whether to display the temperature in Fahrenheit or Celsius. Press Accept to save the changes.




Time of Day

Push the Time of Day button to bring up the Time of day screen. To adjust the time of day, use the left and right arrows on the 5-Key Context Keypad to select whether to modify hours or minutes. Use the up and down arrows on the 5-Key Context Keypad to select the start time. Press Accept to save the changes.



Keypad

Push the Keypad button to bring up the Keypad menu. The Keypad menu adjusts various aspects of the display screen, including which language the menus are displayed in. Push the button next to any item to bring up that item's adjustment screen.

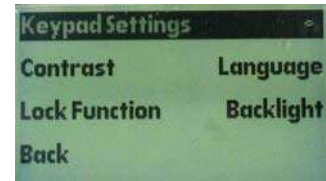

Contrast

Use the up and down arrows on the 5-Key Context Keypad to adjust the contrast of the display screen. Press Accept to save the changes.




Language

Use the up and down arrows on the 5-Key Context Keypad to select the display language. The options are English, Spanish, French and German. Press Accept to save the changes.




Lock Function

Use the up and down arrows on the 5-Key Context Keypad to control others' access to the spa's controls. Choose Unlock to allow access to all spa functions. Choose Partial Lock to lock programmable features but allow control of the jets, waterfall, light and stereo. Choose Full Panel Lock to lock all spa functions. Press Accept to save the changes. To unlock the spa from a Partial Lock, navigate back to the Lock Function menu and change the setting to Unlock. To unlock from a Full Panel Lock, hold down the center key on the 5-Key Context Keypad for 5 seconds.

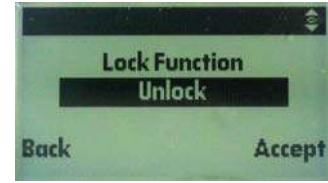


Backlight

Pushing the Backlight button from the Keypad screen brings up the Backlight menu. The Backlight menu adjusts the brightness of the backlight and how long the light will stay lit.

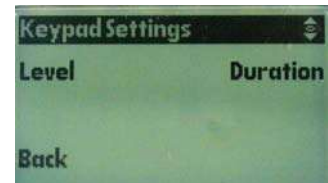

Adjusting Backlight Settings

Push the Level or Duration button to bring up that item's adjustment screen. Use the up and down arrows on the 5-Key Context Keypad to adjust backlight brightness and how long the light stays on. Press Accept to save the changes.

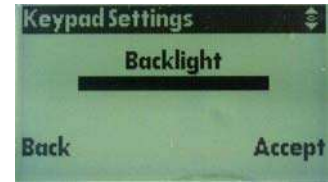


Vision

From the Settings menu, push the Vision button to bring up the Vision adjustment screen. Use the up and down arrows on the 5-Key Context Keypad to indicate if a Vision cartridge is installed. Press Accept to save the changes.




Maintenance

From page 2 of the Settings menu, push the Maintenance button to bring up the Maintenance Reminder adjustment screen. Use the up and down arrows on the 5-Key Context Keypad to indicate if you want the spa to display maintenance reminders. Press Accept to keep your changes. Press Back to go back to the previous menu and cancel your changes.

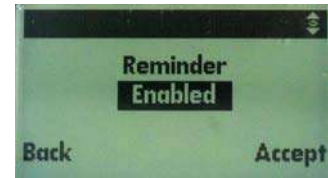


System Reset

The system reset menu resets all parameters to the factory defaults. To proceed and reset all settings, press Reset. To go back and keep your settings, press Back.

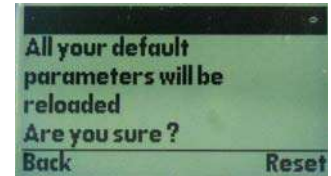


Reminders

Occasionally, a maintenance reminder will appear on the screen. Some messages have an arrow below the last line; push Down on the 5-Key Context Keypad to read the remainder of the message. After the requested action is performed, push Done. To have the system remind you again later, push the Snooze button.

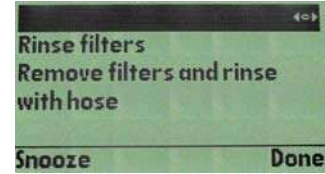


Warnings

If there is a warning light on the display screen, the spa has detected a problem in the spa. **DO NOT ENTER THE WATER IF A WARNING MESSAGE IS DISPLAYED.** Perform the suggested actions and if the problem persists, contact your local dealer for service.

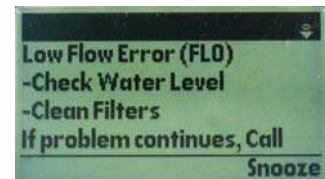

Cleaning Your iDrive Control Panel

If the  iDrive Control Panel needs to be cleaned, using baking soda and water is recommended.

Do NOT use caustic cleaners such as "409," ammonia based cleaners such as "Windex," citrus based or alcohol based cleaners.