



Easy Spa Parts


We know what you need.

Upgrading from Rubber Buttons to a Rocker Switch

The original Underwater Rubber Buttons have been upgraded to an easy-to-install Rocker Switch. This job only takes a few minutes and you'll be pleased with the improved switch operation.

Step 1:

Lower the water level below the housing as shown.
Remove the old rubber buttons from the housing.

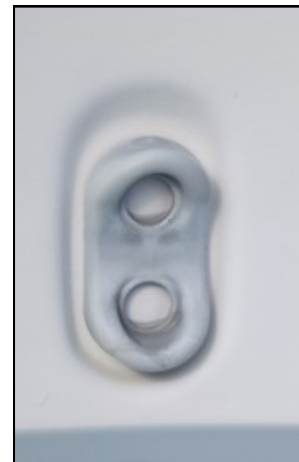


Step 2:

Slide the pivot out of rocker.



Step 3:

Place the pivot piece as shown with the "hooks" facing down. Use a pencil to draw a line on either side of the pivot.

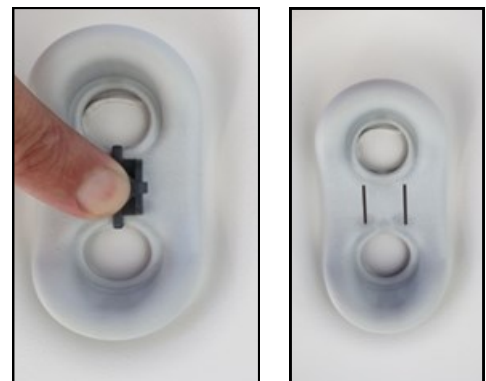


Step 4:

Fill the space between the lines with Super Glue. Don't let it run into the top and bottom holes.



Step 5:

Hold the pivot until the super glue begins to set, (30-60 seconds). Consider wearing rubber gloves for this; I didn't and my fingers stuck to everything for 5 minutes.

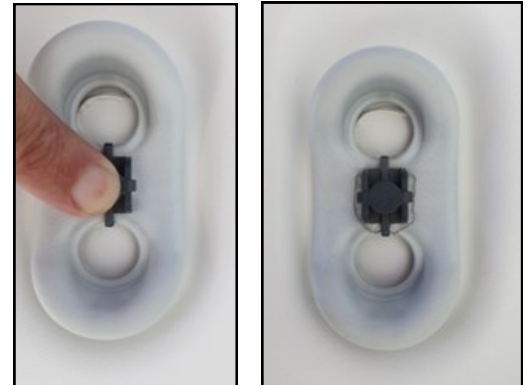

Step 6:

Slide the rocker back into the pivot. It goes in easily and the magnets keep it in place.



Step 7:

The completed rocker system looks like this and operates much better than the original rubber buttons.



Please call if you have any questions

866.418.1840 Toll Free

www.EasySpaParts.com