

TP500S Cutout Template


PRODUCT DRAWINGS
© 2019 BALBOA WATER GROUP

CONFIDENTIAL

BALBOA WATER GROUP
COPY RIGHTED

NOT TO BE COPIED WITHOUT
WRITTEN PERMISSION

Drill a .5" hole on the kerf of the center hole.
This will clear chips from the hole saw and speed the drilling of the first (center) hole.

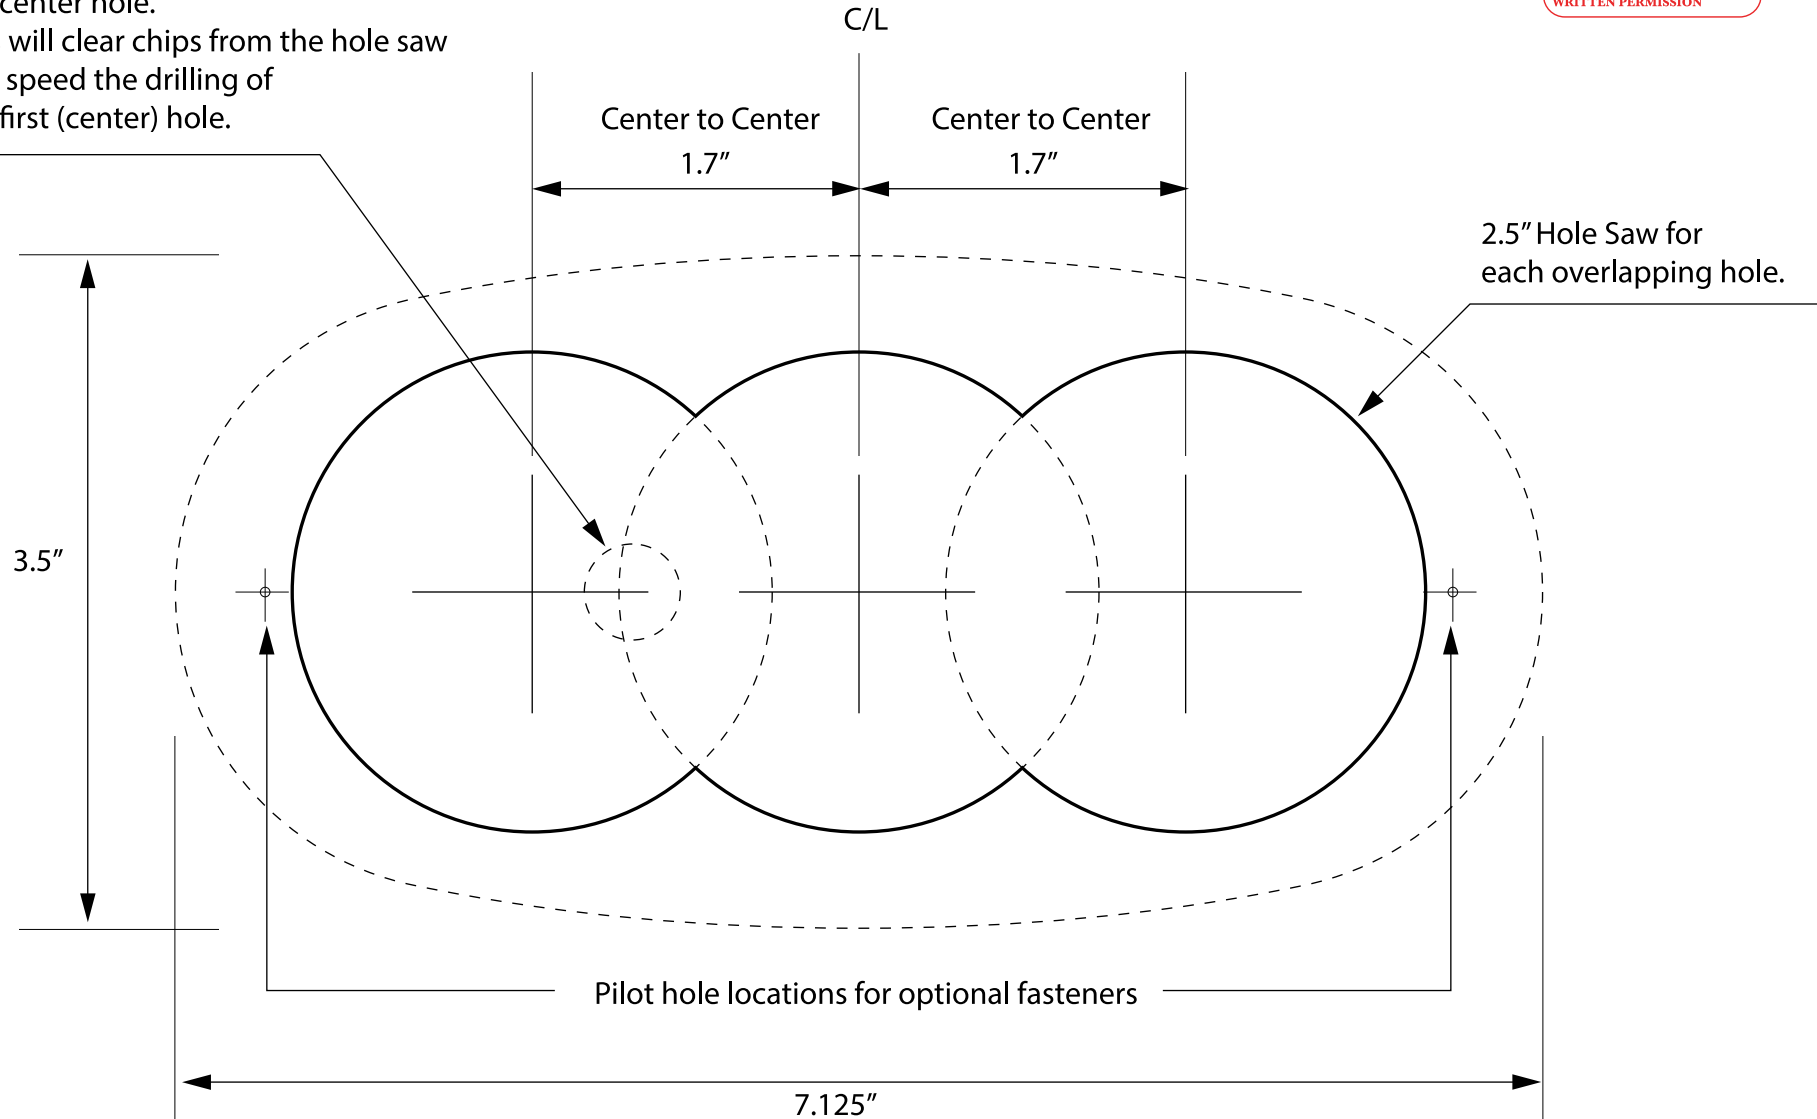

Note:
To print actual size, set Page Scaling to NONE in the Acrobat print dialog.